

Assembly Instructions

This instruction booklet contains important safety information, please read and keep for future reference.

ITEM # HI71DR-G (MOP-SP)

7 DRAWER CHEST



2 people




90 mins




1 YR LTD



2 Box

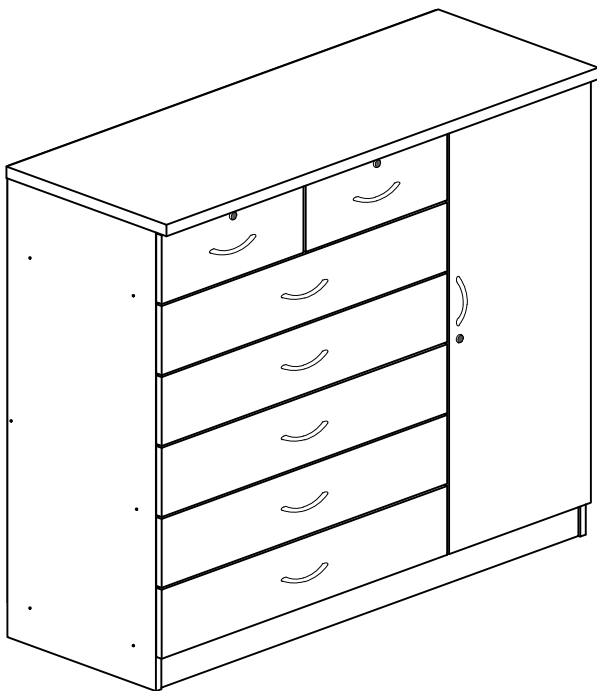

FRONT VIEW

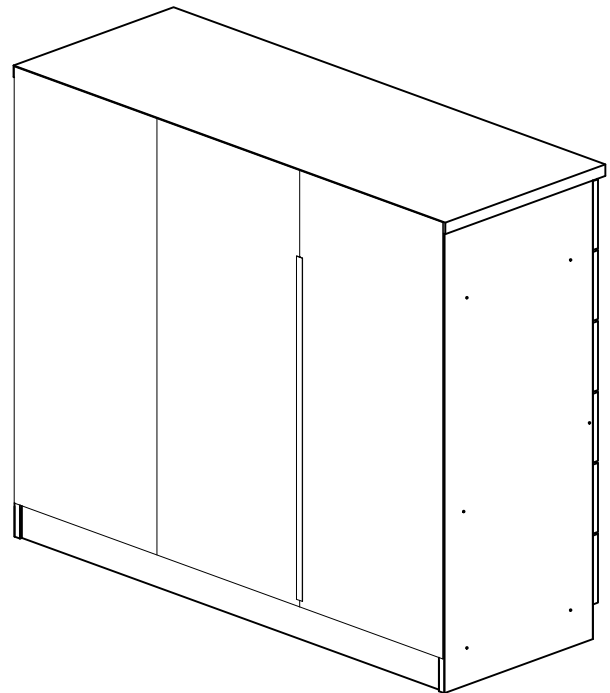

BACK VIEW

Product Dimensions: Height 48.39" x Width 47.24" x Depth 17.76"

Weight Capacity Per Drawer 25lbs.

Weight Capacity Per Shelf 25lbs.



Phone

Mon - Fri | 9:30 am to 5pm EST

1 - 855 - HODEDAH

1 - 855 - 463 -3324



Email

Send us an email

Support@Hodedah.com



Website

Visit our website to open a case

www.Hodedah.com

Questions, need parts, we are here to help!

FOR PROMPT, RELIABLE SERVICE PLEASE HAVE YOUR INSTRUCTION MANUAL READY



DO NOT RETURN PRODUCT TO THE STORE

If parts are missing or damaged please contact our customer service team and we will gladly ship your replacement parts FREE of charge within **ONE YEAR** of purchase!

WARRANTY

Hodedah warrants this product to be free from defects in materials and workmanship and agrees to remedy any such defect. This warranty covers one year from the date of original purchase. This is solely limited to replacement of defective parts and no assembly for labor is included. This warranty does not apply to any product that has been improperly assembled, subjected to misuse, abuse or which has been altered or repaired in any way. To obtain warranty service, original purchaser must present the following; original bill of sale, date of purchase, where the product was purchased and images if applicable. Components replaced warranted through the remainder of the original warranty only. The defective part will be replaced without charge, subject to the terms and conditions described above.

WARNING

- This product contains small parts, keep away from children.
- This product contains plastic bags, keep away from children.
- Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent this, place heaviest items on the lower shelves and drawers. Do not set heavy objects on top shelves and drawers.
- Never allow children to climb or hang on drawers, shelves and doors.
- Never open more than one drawer at a time.
- The use of tip-over restraints may reduce but not eliminate the risk of tip-over.

HODEDAH®


- Never open more than one drawer at a time.
- The use of tip-over restranits may reduce but not eliminate the risk of tip-over.

Let's get started...


Helpful hints, read before beginning assembly

- Make sure you receive all boxes. If your item is packed in one box, box count will read 1 of 1, likewise if your item is packed in two boxes, box count will read 1 of 2 and second box will read 2 of 2.
- Read each step carefully. It is very important that each step is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.
- Work in a spacious level area, preferably carpet, near the place the unit will be used.
- **DO NO USE** power tools to assemble your furniture, it will strip and damage parts.
- Your package should include the following hardware and parts. Parts are labeled or stamped on the raw edge. Please inspect contents to ensure you have received all components. **If you are missing any hardware or parts please contact customer service right away before assembly.**


Assembly Tools Required (not supplied)

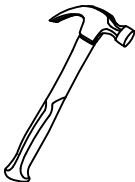


Hammer



Phillips Screwdriver

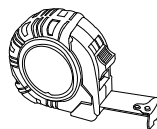

Tape Measure

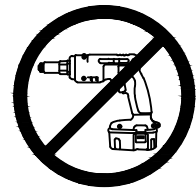










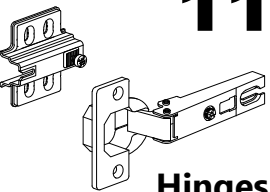







No Power Tools Needed





Product Care and Maintenance

- Wipe clean with dry soft cloth, never use chemicals or cleaning products they will damage the finish.
- Avoid placing your furniture in direct sunlight, as sunlight causes fading.
- Never push, drag or pull your furniture, to move to a new location carefully with two or more people carry the unit to its new location.
- Avoid extreme changes in temperature by arranging furniture away from radiators, heat and air vents and air conditioning units.

Hardware List

<p>1</p>  <p>Screw M6 x 40mm</p>  <p>Pvc Cap</p>	<p>QTY</p> <input type="checkbox"/> 20 Pcs 20 Pcs	<p>2</p>  <p>Screw M4 x 32mm</p>	<p>QTY</p> <input type="checkbox"/> 66 Pcs	<p>3</p>  <p>Screw M3.5 x 14mm *For # 15 Drawer Slides</p>	<p>QTY</p> <input type="checkbox"/> 72 Pcs
<p>5</p>  <p>Pvc Dowel</p>	<p>QTY</p> <input type="checkbox"/> 33 Pcs	<p>6</p>  <p>Mini Fix</p>  <p>Pvc Cap</p>	<p>QTY</p> <input type="checkbox"/> 8 Sets 8 Pcs	<p>7</p>  <p>Nail</p>	<p>QTY</p> <input type="checkbox"/> 170 Pcs
<p>8</p>  <p>Allen Key</p>	<p>QTY</p> <input type="checkbox"/> 1 Pcs	<p>9</p>  <p>Shelf Support</p>	<p>QTY</p> <input type="checkbox"/> 8 Pcs	<p>10</p>  <p>Screw M 10 X 1/2 MM</p>	<p>QTY</p> <input type="checkbox"/> 6 Pcs
<p>11</p>  <p>Hinges</p>	<p>QTY</p> <input type="checkbox"/> 3 Pcs	<p>12</p>  <p>Lock</p>	<p>QTY</p> <input type="checkbox"/> 3 Pcs	<p>13</p>  <p>Screw M6.2 x 10mm *For # 14 Drawer Slides</p>	<p>QTY</p> <input type="checkbox"/> 28 Pcs
<p>16</p>  <p>H-Profile</p>	<p>QTY</p> <input type="checkbox"/> 1 Pcs	<p>17</p>  <p>V-Bracket</p>	<p>QTY</p> <input type="checkbox"/> 2 Pcs	<p>18</p>  <p>Hanging Rod</p>	<p>QTY</p> <input type="checkbox"/> 1 Pcs
<p>19</p> <p>Anti-Tip Kit (separate from hardware pack)</p>	<p>QTY</p> <input type="checkbox"/> 1 PK				













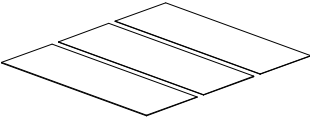


Accessories

 <p>* Fix On Side & Stand Panels (A, H)</p> <p>* Fix On Stand Panels (H, I)</p>	<p>14</p> <p>Drawer Slide - A</p> <p>*Fix On Side Panels (A, H) & (I)</p>	<p>QTY</p> <p><input type="checkbox"/></p> <p>7 Sets</p>
 <p>* Fix On Drawer Side Panels (Q)</p> <p>* Fix On Drawer Side Panels (R)</p>	<p>15</p> <p>Drawer Slide - B</p> <p>*Fix On Side Panels (Q) & (R)</p>	<p>QTY</p> <p><input type="checkbox"/></p> <p>7 Sets</p>
<p>4</p>  <p>Handle</p>  <p>Screw M4 X 20mm</p>	<p>QTY</p> <p><input type="checkbox"/></p> <p>8 Pcs</p> <p>16 Pcs</p>	











Important




1. Before you throw the package, please use the Check Box to identify the parts and hardware to ensure that you have everything you need.
2. Check and measure the bolts before applying them to parts.
3. Do not completely tighten all hardware until the entire assembly is complete, unless indicated otherwise.

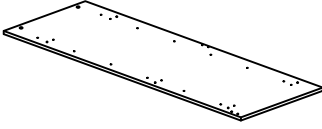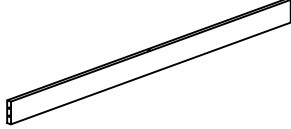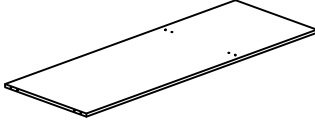Parts List
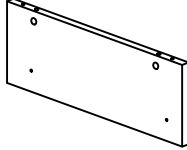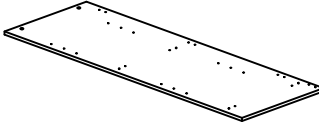
<p>A Left Side Panel 1200x 413 x 15mm</p> 	<p>QTY 1 Pc</p>	<p>B Kick Panel 1165 x 89 x 15mm</p> 	<p>QTY 1 Pc</p>	<p>C Bottom Panel 1165 x 412 x 15mm</p> 	<p>QTY 1 Pc</p>
<p>D Front Strengthening Panel 773 x 76 x 15mm</p> 	<p>QTY 1 Pc</p>	<p>E Back Strengthening Panel 773 x 76 x 15mm</p> 	<p>QTY 1 Pc</p>	<p>F Strengthening Panel -Back 773 x 76 x 15mm</p> 	<p>QTY 1 Pc</p>
<p>G Strengthening Panel -Front 773 x 76 x 15mm</p> 	<p>QTY 1 Pc</p>	<p>H Divider Panel 181x 413 x 15mm</p> 	<p>QTY 1 Pc</p>	<p>I Stand Panel 1095.5x 412 x 15mm</p> 	<p>QTY 1 Pc</p>
<p>J Partition Panel 376x 340 x 15mm</p> 	<p>QTY 1 Pc</p>	<p>K Right Side Panel 1200x 413 x 15mm</p> 	<p>QTY 1 Pcs</p>	<p>L Top Panel 1200 x 445 x 30mm</p> 	<p>QTY 1 Pc</p>
<p>M Back Panels 1140 x 397 x 3mm</p> 	<p>QTY 3 Pcs</p>	<p>N Left Drawer Front Panel -Small Drawer 394 x 180 x 15mm</p> 	<p>QTY 1 Pc</p>	<p>O Right Drawer Front Panel -Small Drawer 394 x 180 x 15mm</p> 	<p>QTY 1 Pc</p>

Parts List

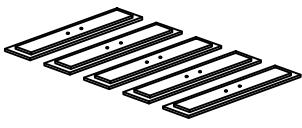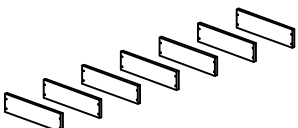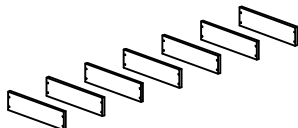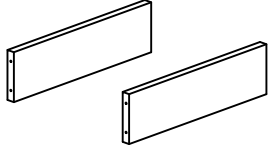
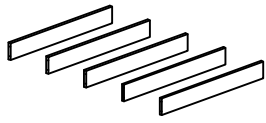
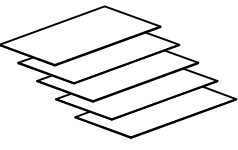
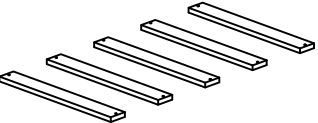

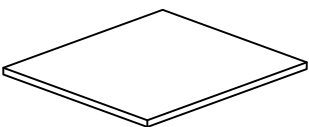
<p>P Drawer Front Panels -Big Drawers 793 x 180 x 15mm</p> 	<p>QTY 5 Pcs</p>	<p>Q Drawer - Left Side Panels 394 x 116 x 15mm</p> 	<p>QTY 7 Pcs</p>	<p>R Drawer - Right Side Panels 394 x 116 x 15mm</p> 	<p>QTY 7 Pcs</p>
<p>S Drawer End Panels -Small Drawers 324 x 111 x 15mm</p> 	<p>QTY 2 Pcs</p>	<p>T Drawer Base Panels-Small Drawers 353x 394 x 3mm</p> 	<p>QTY 2 Pcs</p>	<p>U Drawer End Panels -Big Drawers 714 x 111 x 15mm</p> 	<p>QTY 5 Pcs</p>
<p>V Drawer Base Panels -Big Drawers 746 x 394 x 3mm</p> 	<p>QTY 5 Pcs</p>	<p>W Drawer Base Supporting Panels 394 x 51 x 15 mm</p> 	<p>QTY 5 Pcs</p>	<p>X Door Panels 1106 x 394 x 15 mm</p> 	<p>QTY 1 Pc</p>
<p>Y Adjust Panel 376x 340 x 15mm</p> 	<p>QTY 2 Pcs</p>				

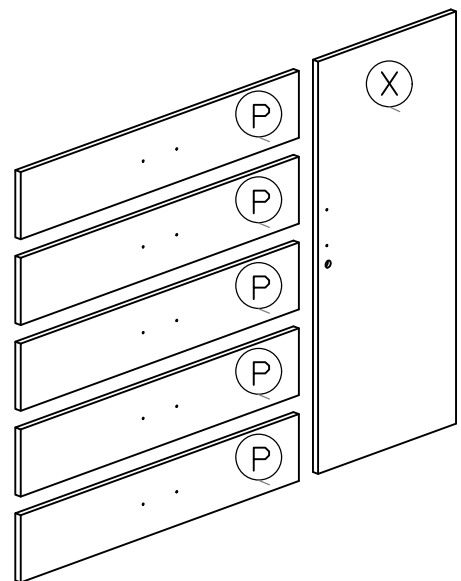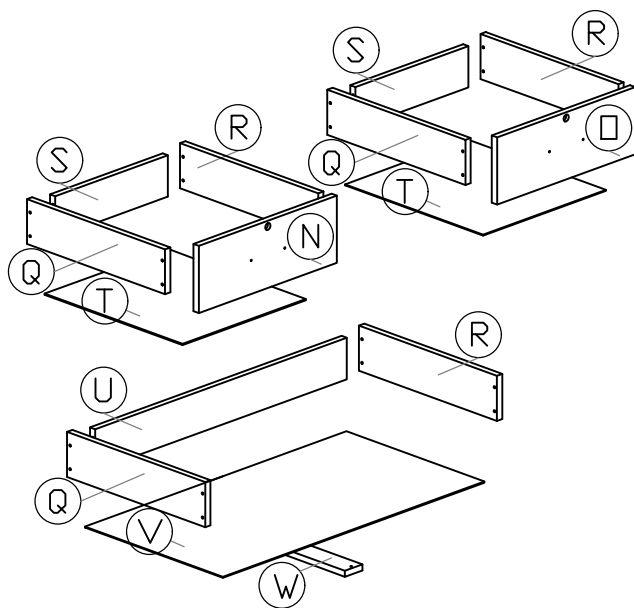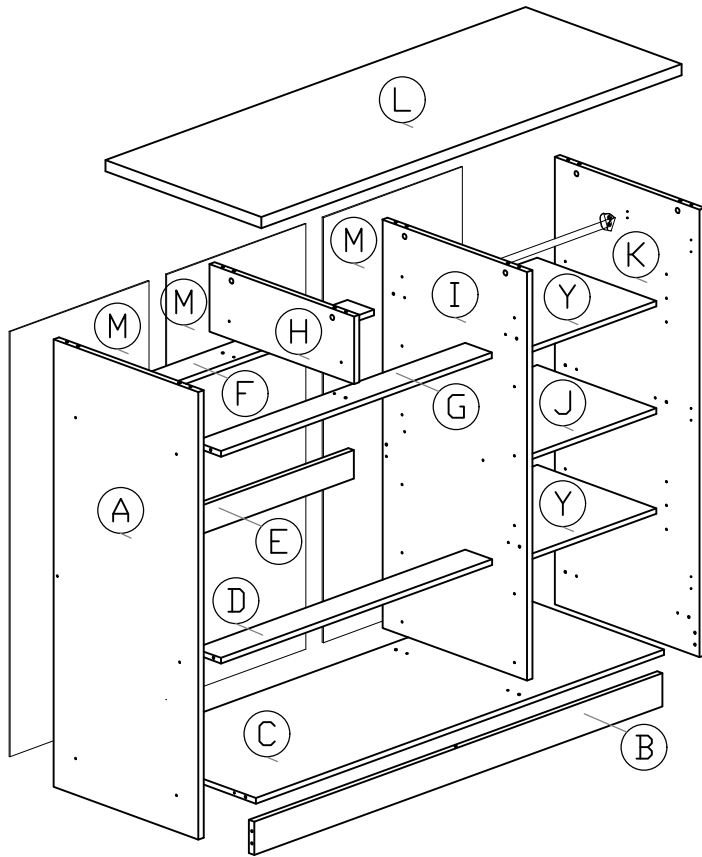

Pre - Assembly

Insert the mini fix ⑥ (nuts) with the cross arrow mark facing upward and aim to panel **A**, **I** & **K**'s top thru holes. (As shown)


1

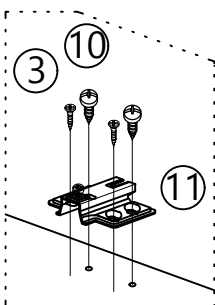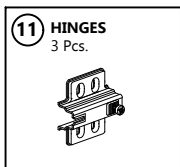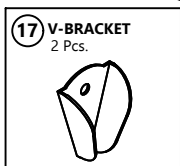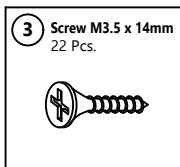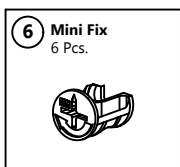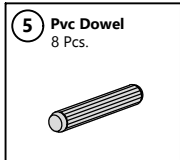

3

Insert pvc dowels ⑤, into 8 non thru holes as shown using hammer to gently tap them in.

9



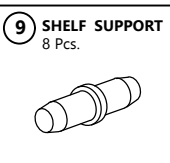


6

Place Hinges ⑪ at the panel **K** as shown. Then tighten the hinges ⑪ with 2 screws ⑩ and 2 screws ③.

2

Place the drawer slide **A** ⑭ onto the 2 holes area shown at left side panel **A** and **I**. Then tighten it with 2 screws ⑬ and 1 screw ③. Do the same for the 5 other slide **A** ⑭.

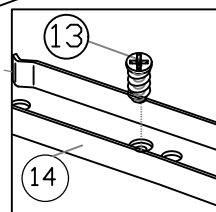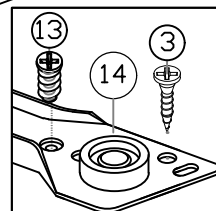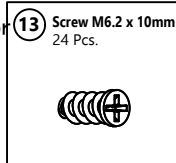


Tighten V-brackets ⑪ on panels **I** and **K** as shown by using 2 screws ③.

5

4

PANEL A
PANEL I
PANEL K



Pre - Assembly

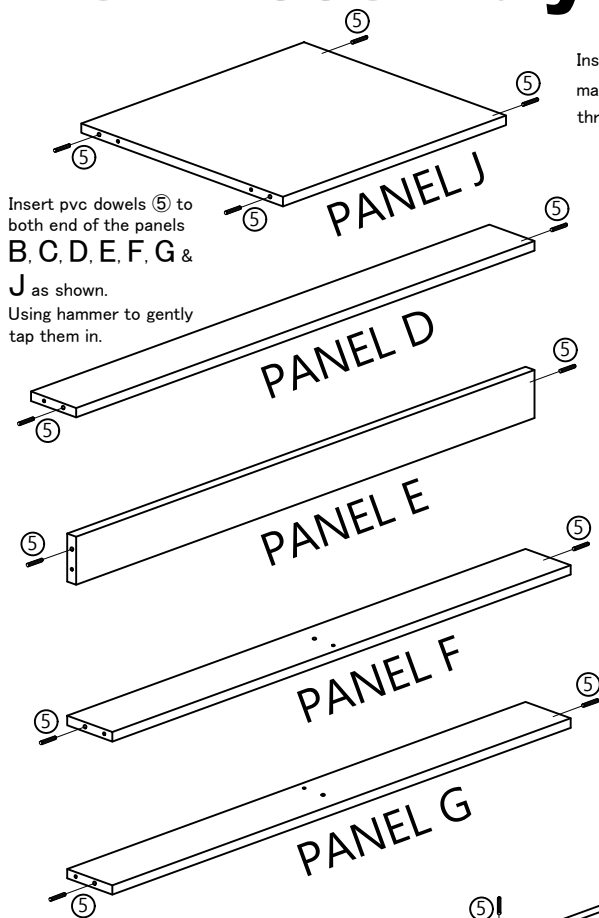


Insert pvc dowels (5) to both end of the panels B, C, D, E, F, G &

J as shown. Using hammer to gently tap them in.


Insert mini fix (6) (nuts) with the cross arrow mark facing upward and aim to the panel H's top thru holes. (As shown)

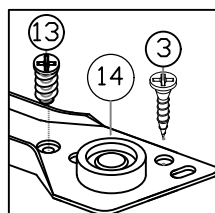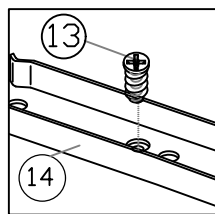






Insert pvc dowels (5) to edge of the panel H's non-thru hole as shown. Using hammer to gently tap them in.

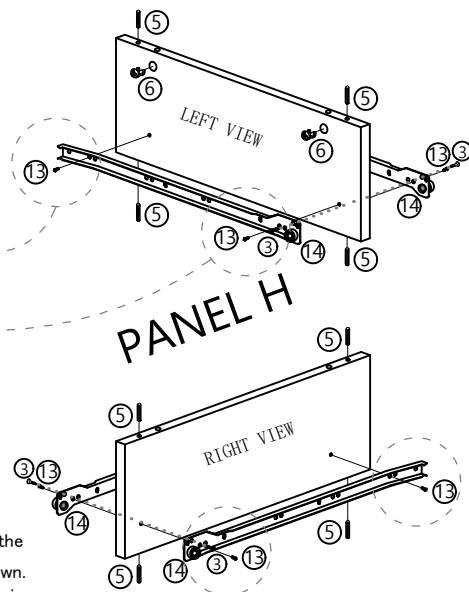

Place a drawer slide A (14) onto the 2 holes area shown at left side of panel H. Then tighten the drawer slide A (14) with 2 screws (13) and 1 screw (3).












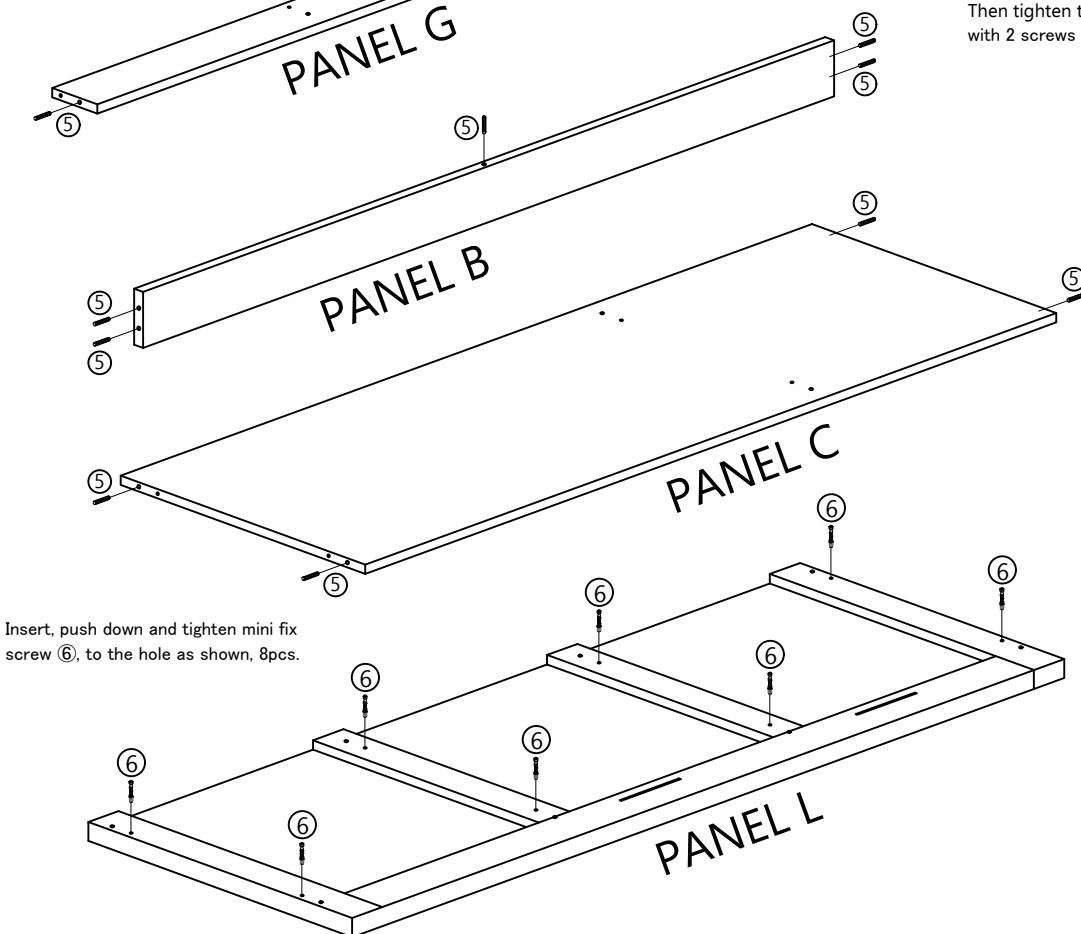


Insert, push down and tighten mini fix screw (6), to the hole as shown, 8pcs.

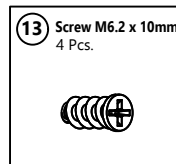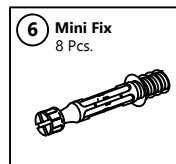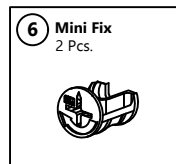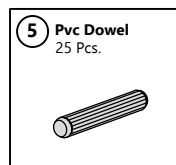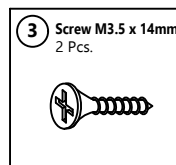

Assembly Of Small Drawers : 2 DRAWERS

- Place panel Q and panel R on each side of panel N & O as shown.
- Then, tighten screw ② to panel Q and panel R 's lower thru holes to fix them onto panel N & O.
- Next tighten screw ② to panel Q and panel R 's upper thru holes to fix up to the panel S.

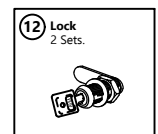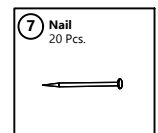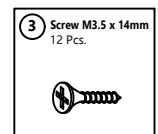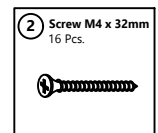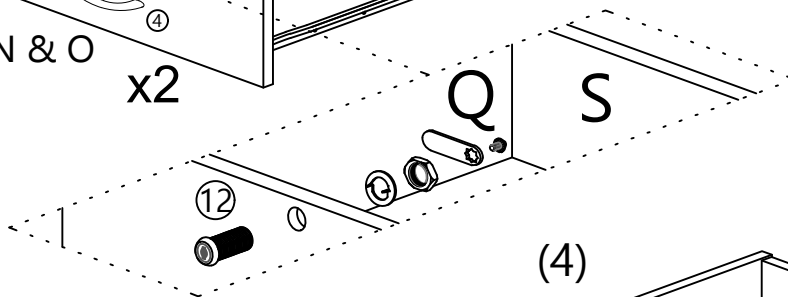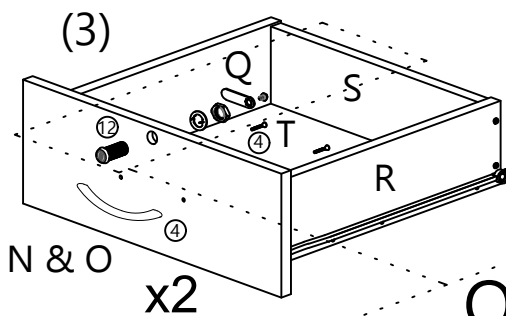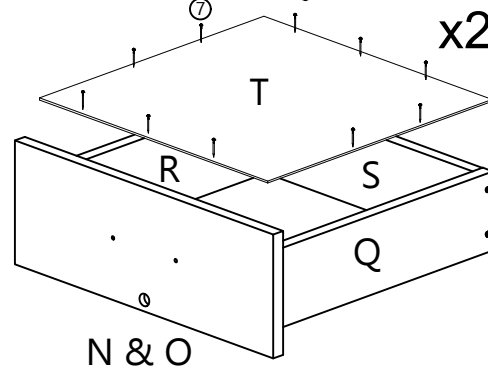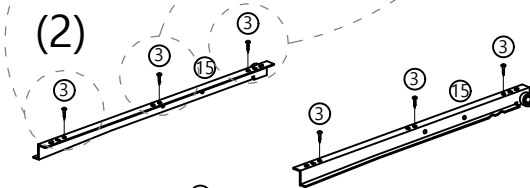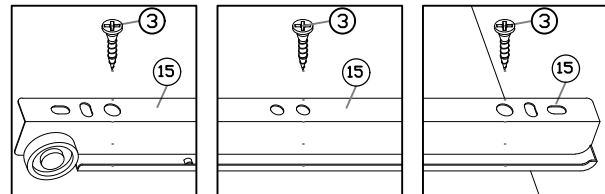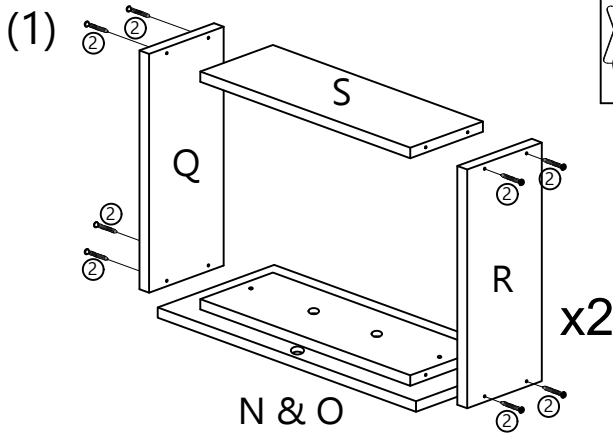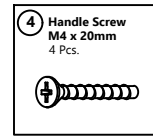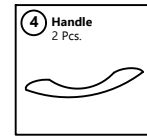


-Flip drawer with bottom side up, place panel T onto the drawer and align properly. Then nail the nails provided with hammer on the border of panel T as shown. The gap between 2 nails should be about 100mm.

-After that, place drawer slide B (15) with the small white roller facing outward and with other end tip touching panel N & O onto each bottom side (angle) edge of panel R and panel Q. Then tighten 3 screws ③ on each drawer slide B (15) (as shown).


-Flip drawer over with bottom side down, disassemble the lock (12) into 5 parts as shown, then install the lock (12) by inserting the lock (12) 's cylinder into middle thru hole of panel N & O, then fix the lock up.

-Tighten 2 screw ④ from inner side of panel N & O into the handle ④ holes.

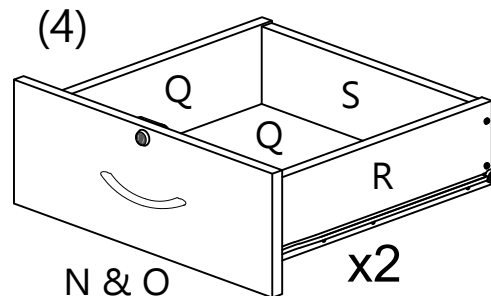

COMPLETED

Assembly Of Big Drawers : 5 DRAWERS

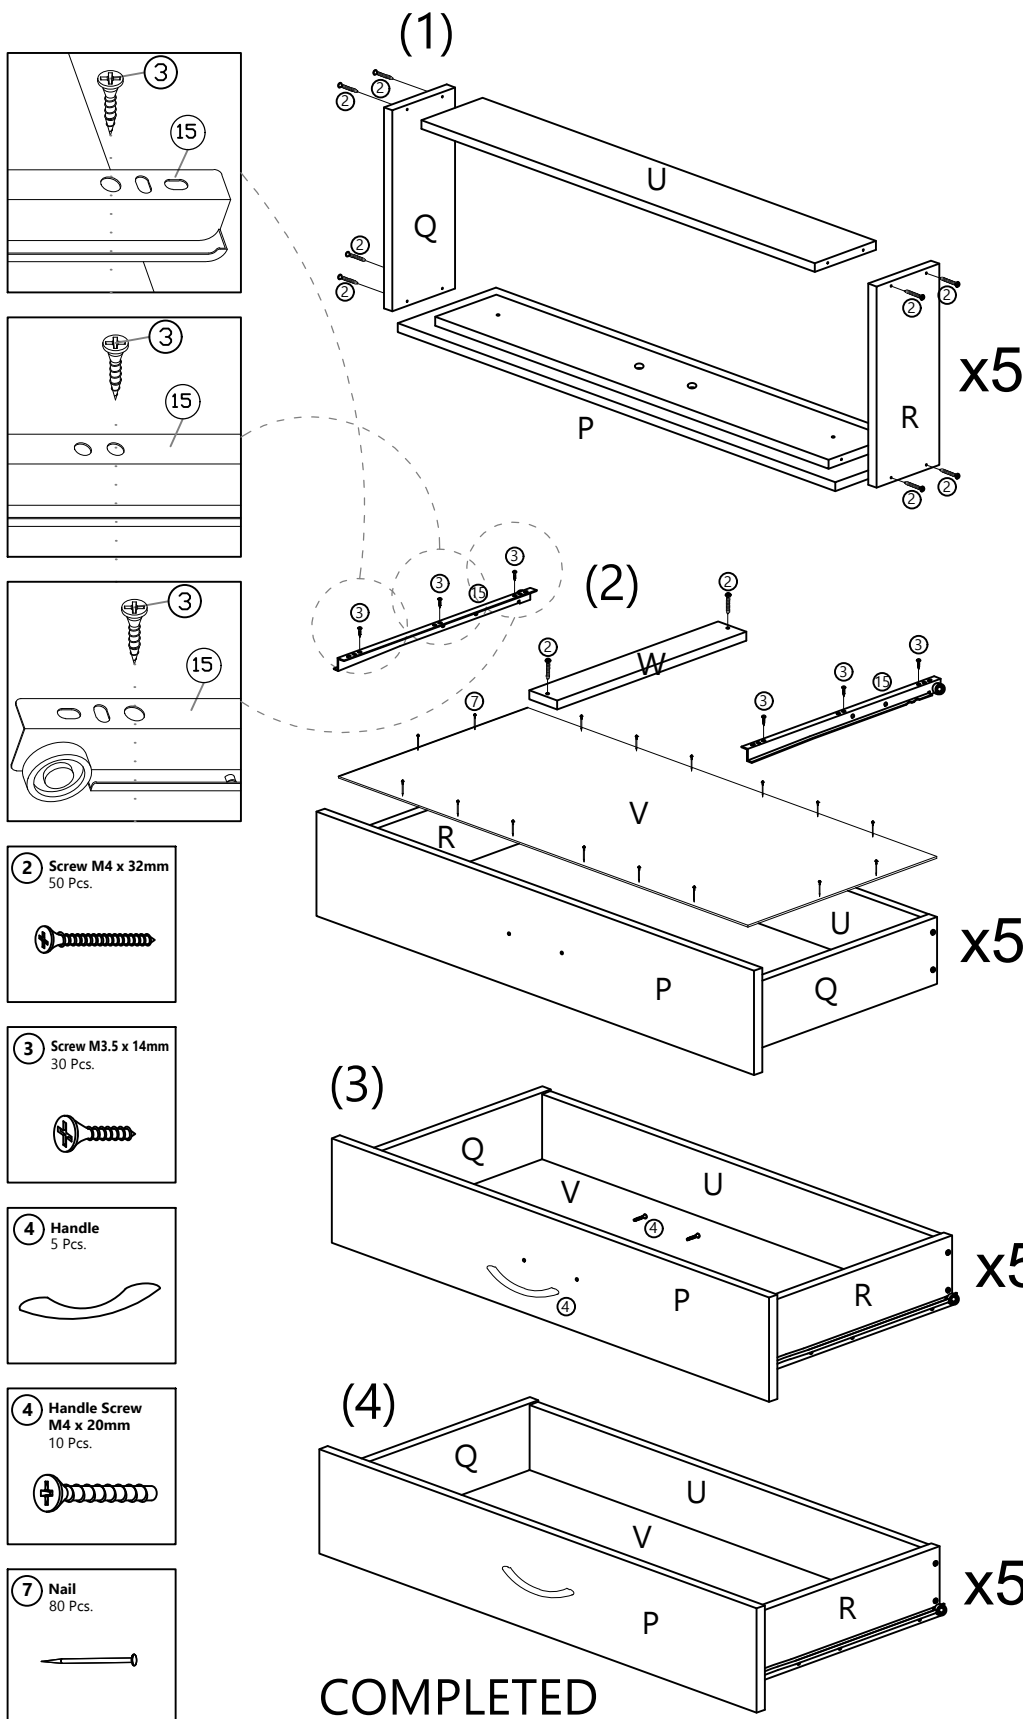

-Place panel Q and panel R on each side of panel P as shown.
 -Then, tighten screw ② to panel Q and panel R's lower thru holes to fix them onto panel P.

-Next tighten screw ② to panel Q and panel R's upper thru holes to fix up to the panel U.

-Flip drawer with bottom side up, place panel V onto the drawer and align properly. Then nail the nails provided with hammer on the border of panel V as shown. The gap between 2 nails should be about 100mm.

-After that, place a drawer slide B ⑮ with the small white roller facing outward and with other end tip touching panel P onto each bottom side (angle) edge of panel R and panel Q.



Then tighten 3 screws ③ on each drawer slide B ⑮ (as shown).

-Put drawer supporting W onto middle of panel V, then tighten screw ② to drawer supporting W's thru hole to fix it onto panel V / panel P (inner panel) / panel U.

-Flip the drawer over.
 -Tighten 2 screw ④ from inner side of panel P into the handle ④ holes.

Step 1



- * Fix Panel **B** onto Panel **C** by inserting the dowel onto the non-thru holes at Panel **C** as shown.
- * Fix Panel **B,C,D,E,F,G** onto Panel **A** by inserting the (Left) dowels onto the non-thru holes at Panel **A**.
- * Using allen key **⑧** to tighten screw **①** from the 6 thru holes of panel **A**.

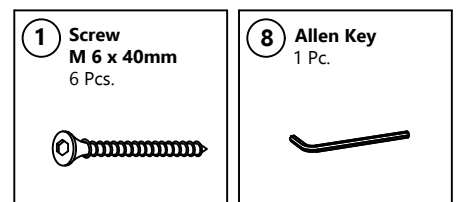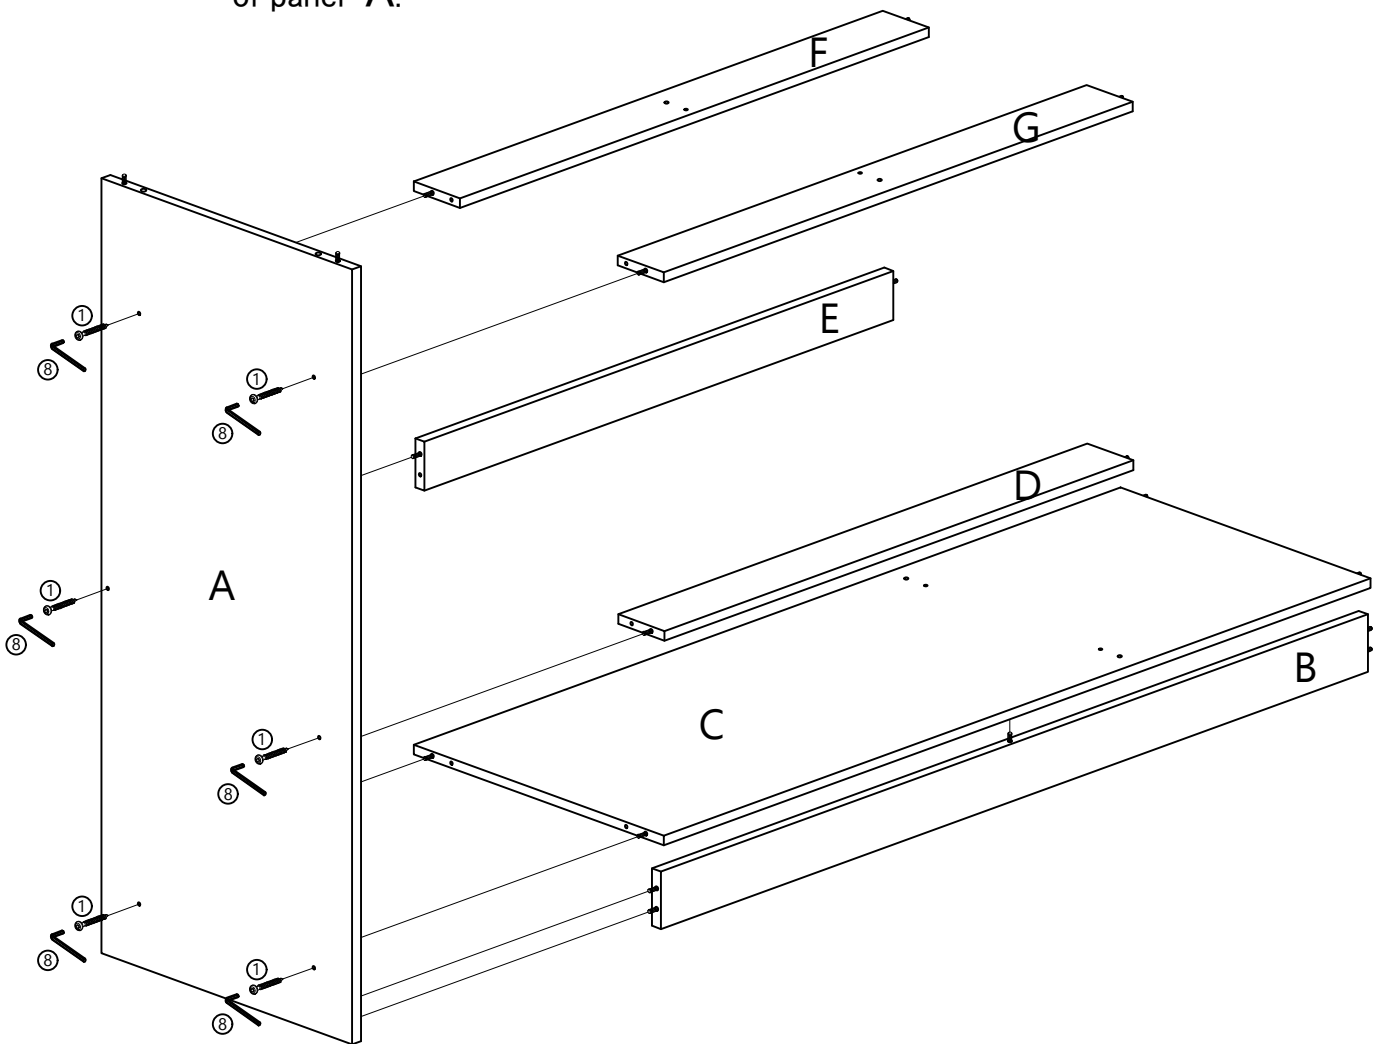

CAUTIONS : When inserting the PVC Dowels to non-thru holes, don't push to hard. Otherwise, the side panels (A, I & K) may be damaged.

Step 2




- * Fix Panel B,C,D,E,F,G onto Panel I by inserting the (Right) dowels onto the non-thru holes at Panel I.
- * Place Panel H (with drawer slide A ⑭ downward and the small white roller facing forward) onto panel G and panel F by inserting the (down) dowels onto non-thru holes at bottom area of panel H. Using allen key ⑧ to tighten the 2 screw ① from the middle thru hole of panel G and Panel F.
- * Using allen key ⑧ to tighten screw ① from the 4 thru holes of panel H.

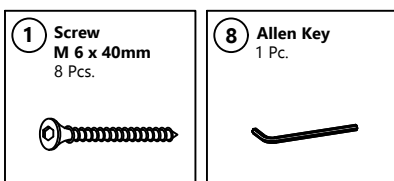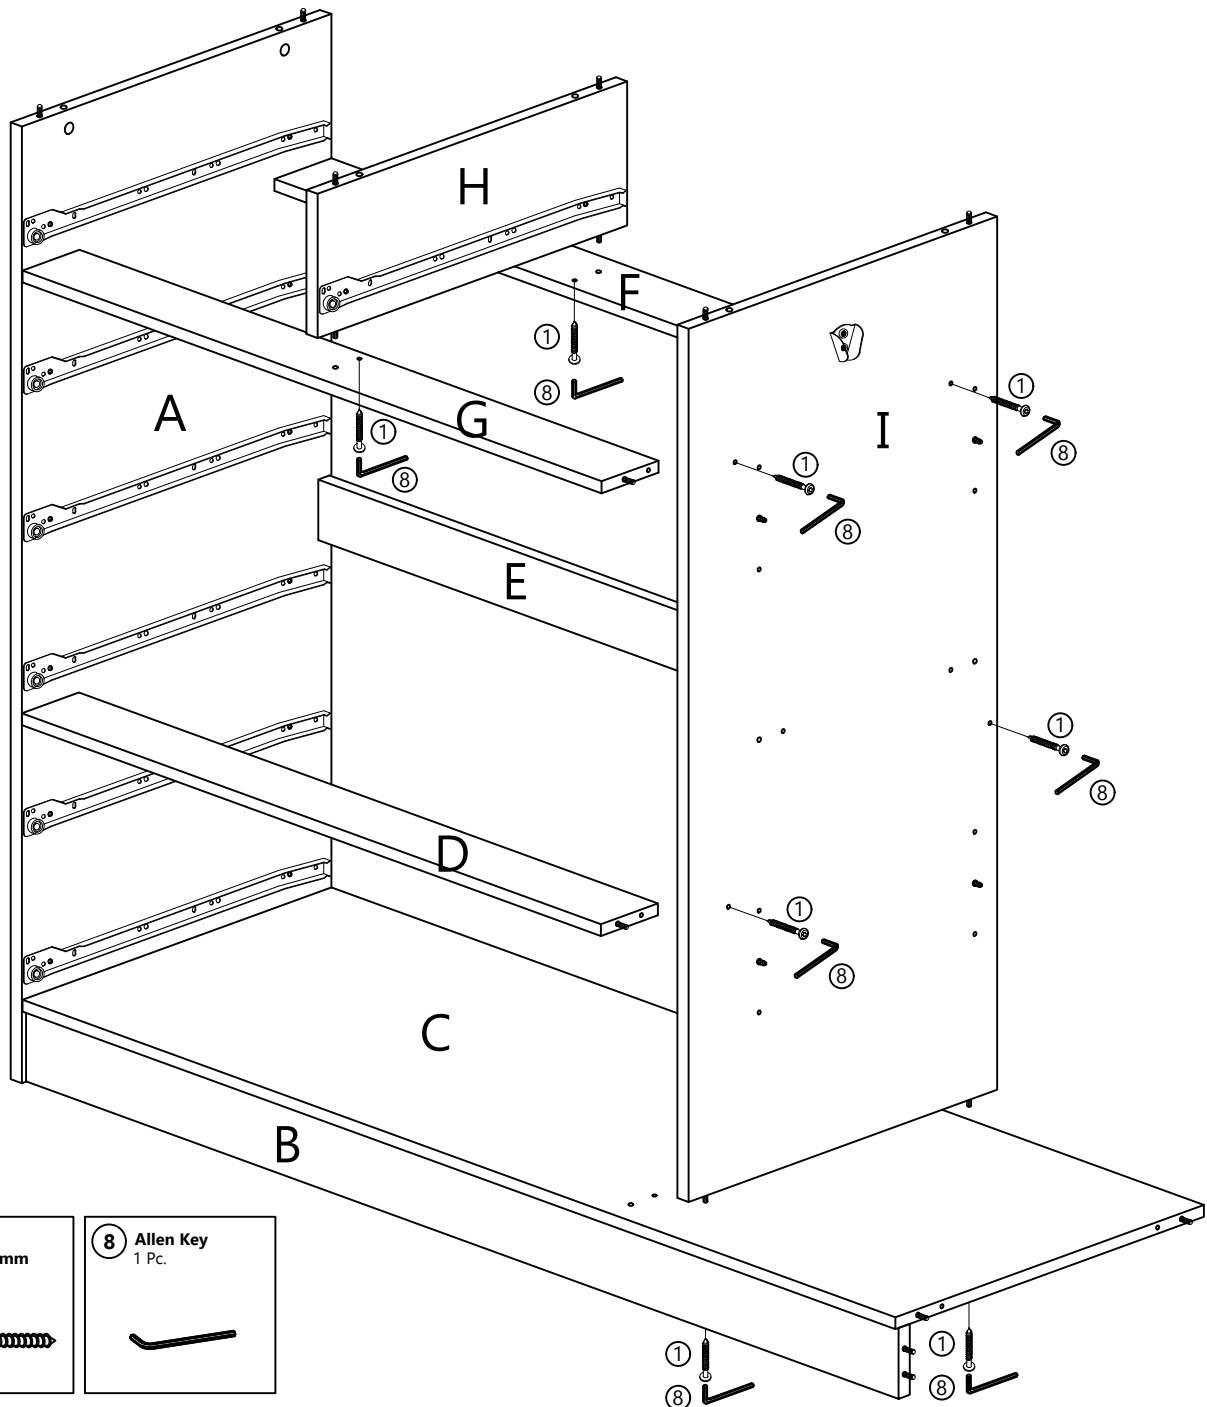

CAUTIONS : When inserting the PVC Dowels to non-thru holes, don't push to hard. Otherwise, the side panels (A, I & K) may be damaged.





Step 3

- * Fix Panel J onto Panel I by inserting the (Left) dowels onto the non-thru holes at Panel I.
- * Using allen key ⑧ to tighten screw ① from the 2 thru holes of panel I.
- * Fix panel K onto panel J, B and C by inserting the (right) dowel onto the non-thru hole at panel K.
- * Using allen key ⑧ to tighten screw ② from 4 thru holes of panel K.

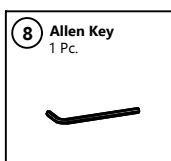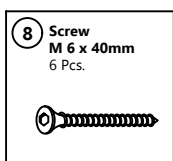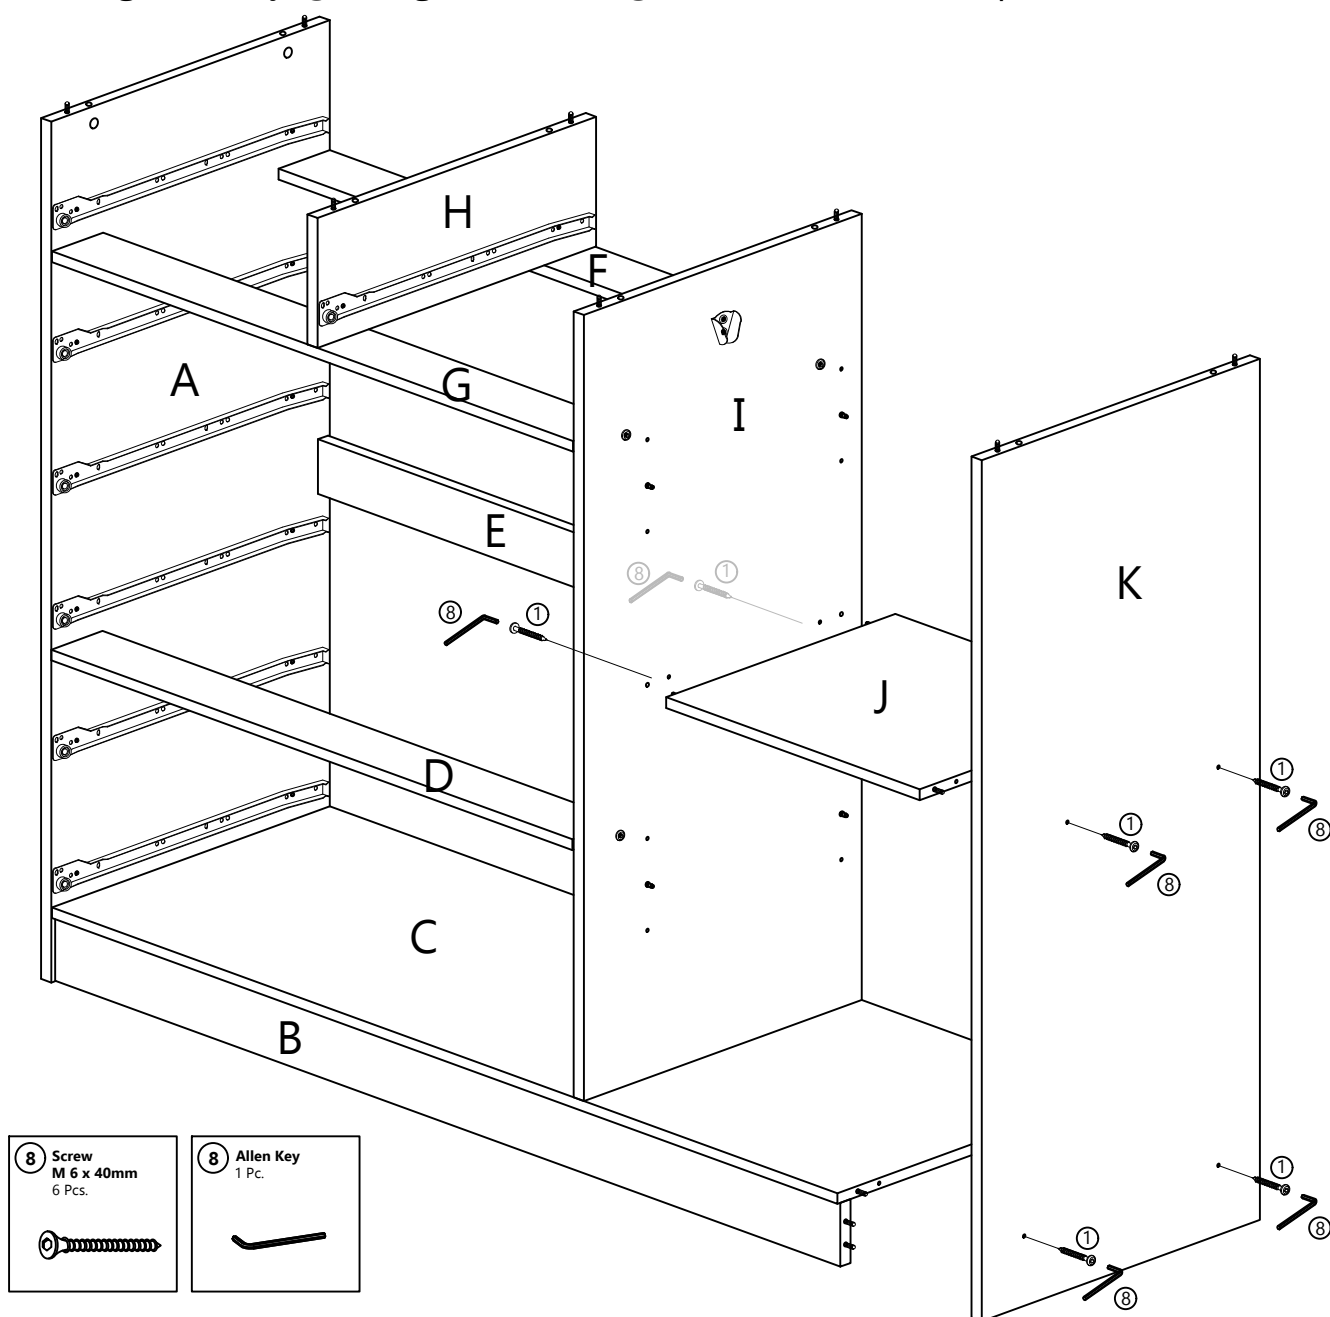

CAUTIONS : When inserting the PVC Dowels to non-thru holes, don't push to hard. Otherwise, the side panels (A, I & K) may be damaged.

Step 4

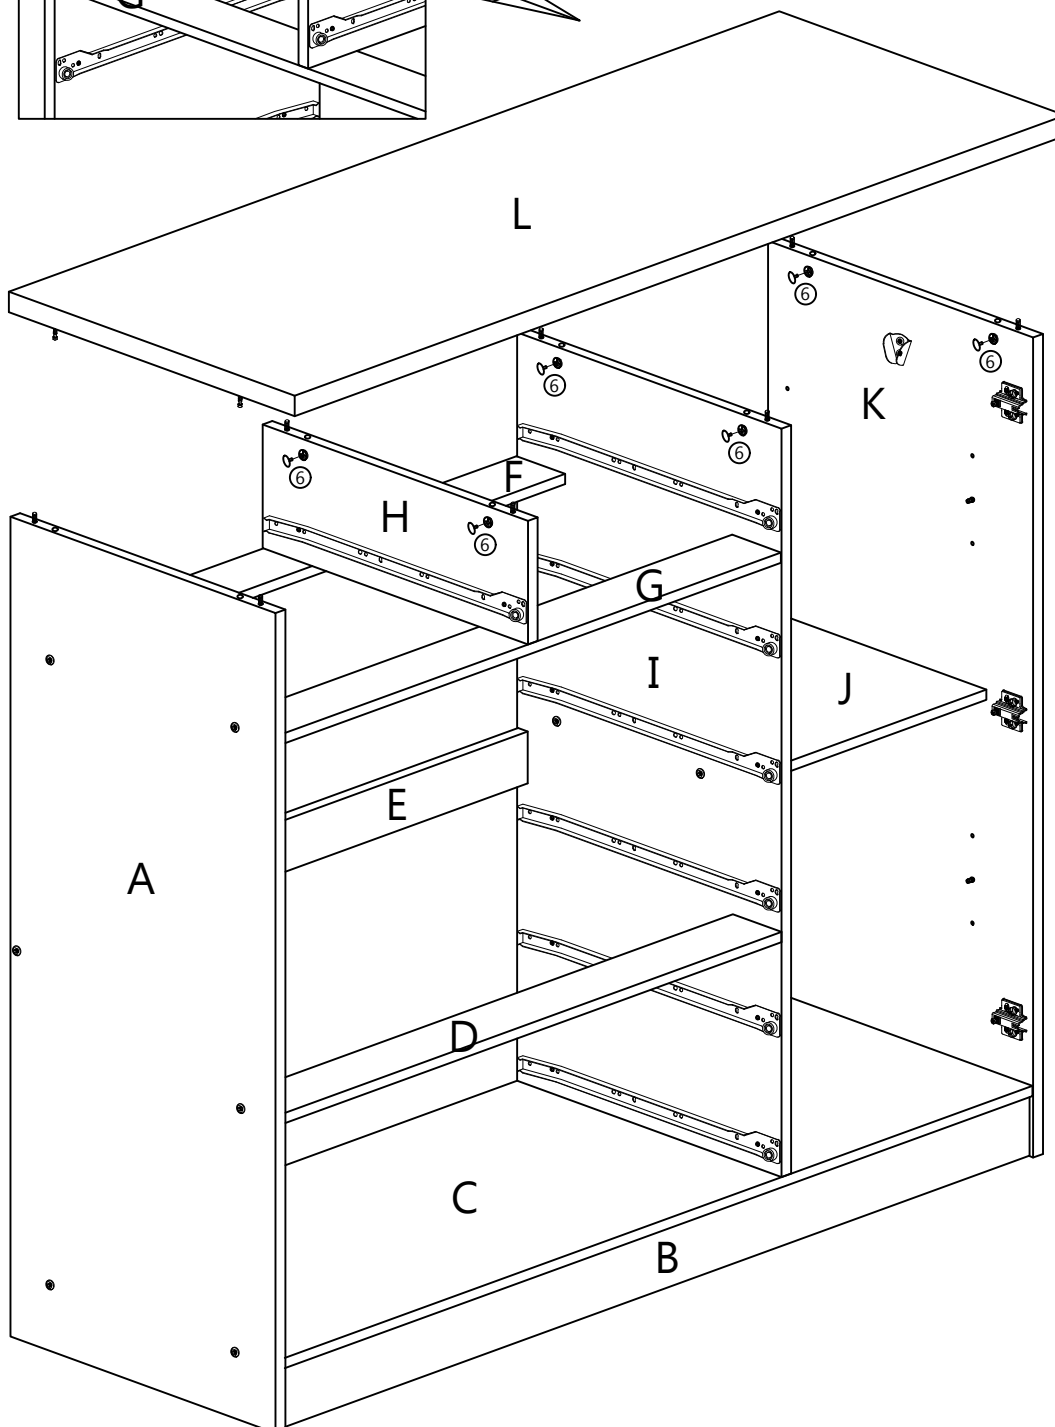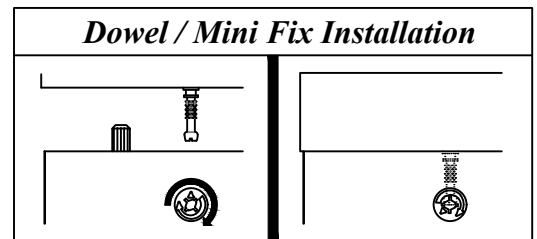
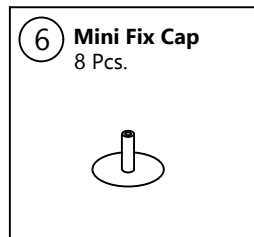
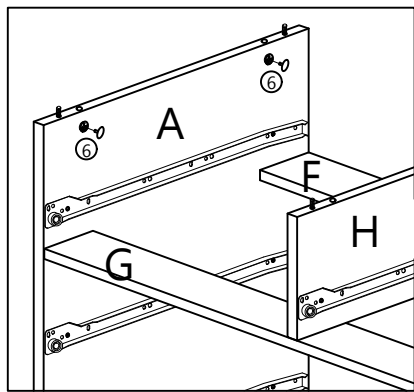


Place and fix panel L onto panel A, panel H, panel I and panel K, and align properly by inserting the 8 (down) mini fix screws ⑥ onto the L-thru holes at top edge of panel A, H, I and K. At the same time, pushing and light tapping of panel L downward to have panel A, panel H, panel I and panel K's upside dowel going onto panel L's non-thru holes.

*Then, tighten mini fix ⑥ clockwise to lock the mini fix up, for tightening panel L up. Cover 8 mini fix caps provided by pushing the cover's stem onto the hole of mini fix nut on upper side of panel A, H, I and K.


Step 5

- * Lay the chest at face down position, Place the 3 back Panels **M** onto the back of the main unit, and join the 2 panel **M** together with H-profile by slotting one side each of panel **M** into the track of H-profile. Then align them properly for nailing.
- * Then use hammer to nail the nails one by one and at center of 4 side edges. Gap between 2 nails should be about 100mm for all.

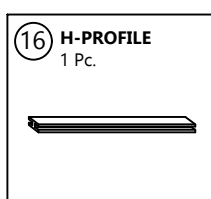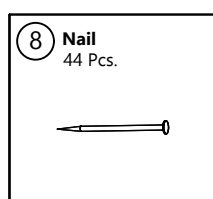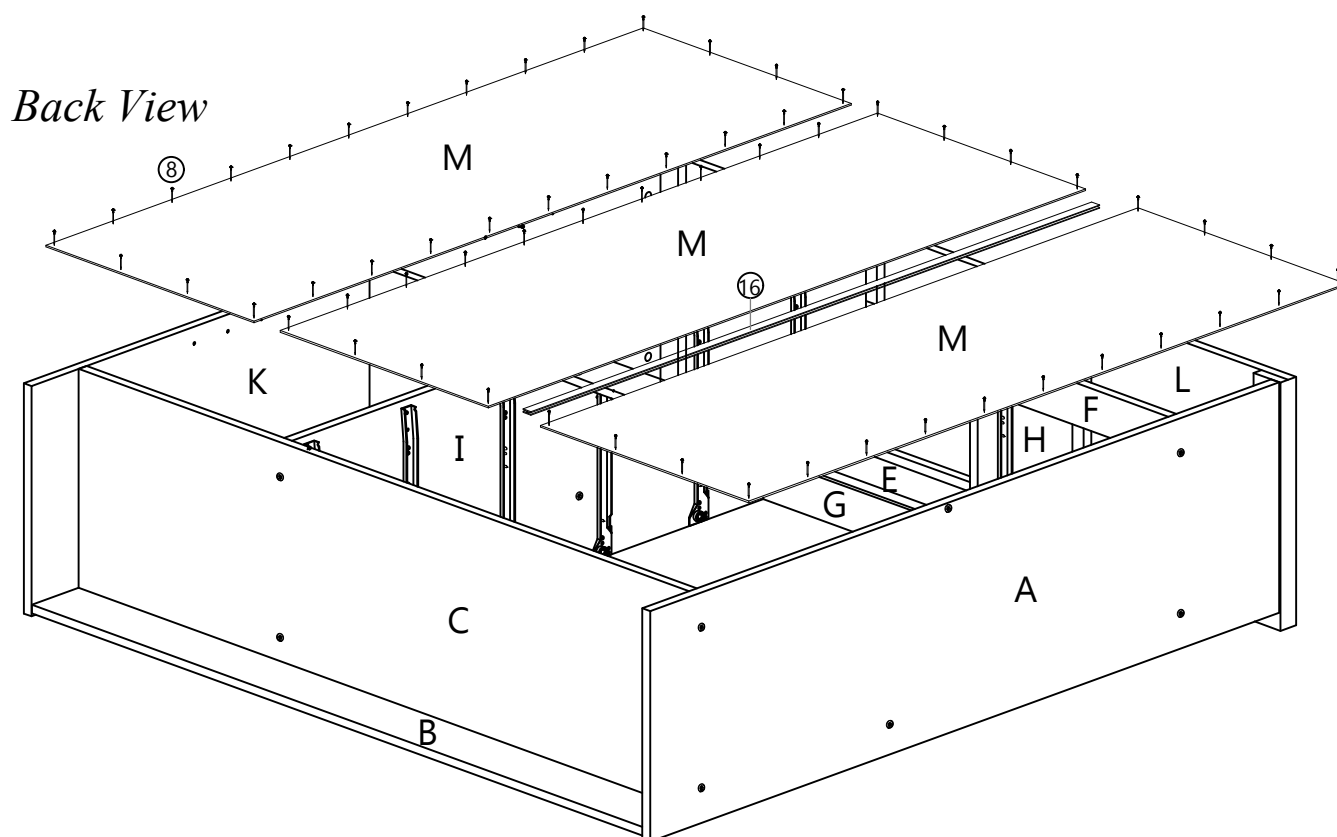


Step 6

- * Lift up the main unit carefully and let it stand up properly.
- * Cover all the screw ①'s head with the pvc cap provided by pushing the cover's stem onto the hole of screw head one by one for all screws.

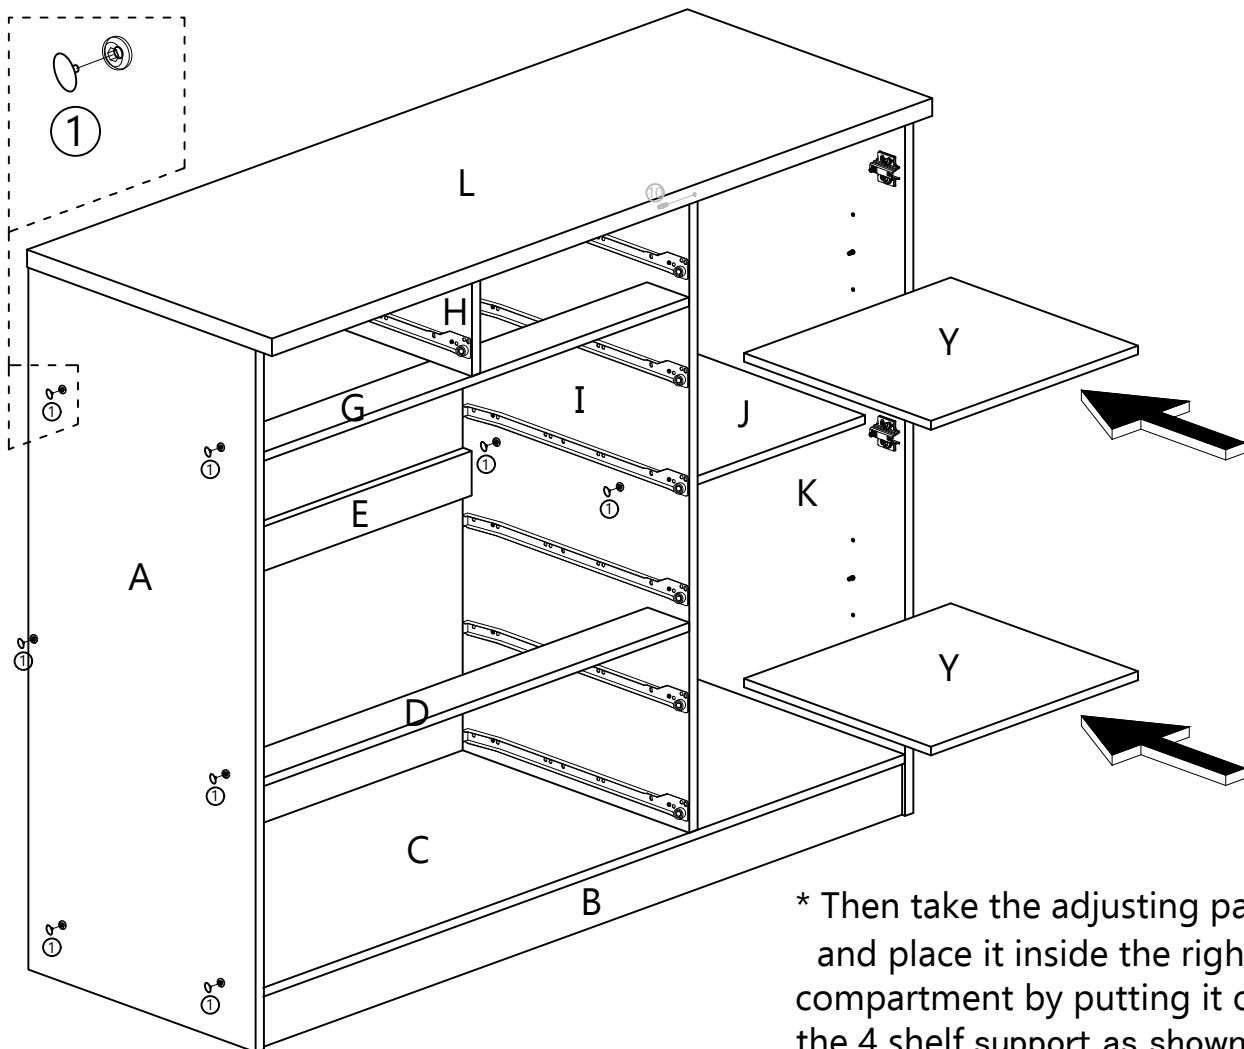


* Then take the adjusting panel Y and place it inside the right compartment by putting it on top the 4 shelf support as shown.

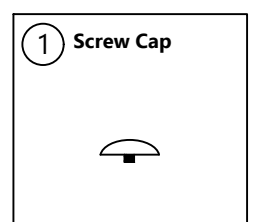






Step 7

* Insert Hinges ⑪ into door panel X's non-thru hole as shown, then tighten screw ③ through hinges ⑪'s thru hole.

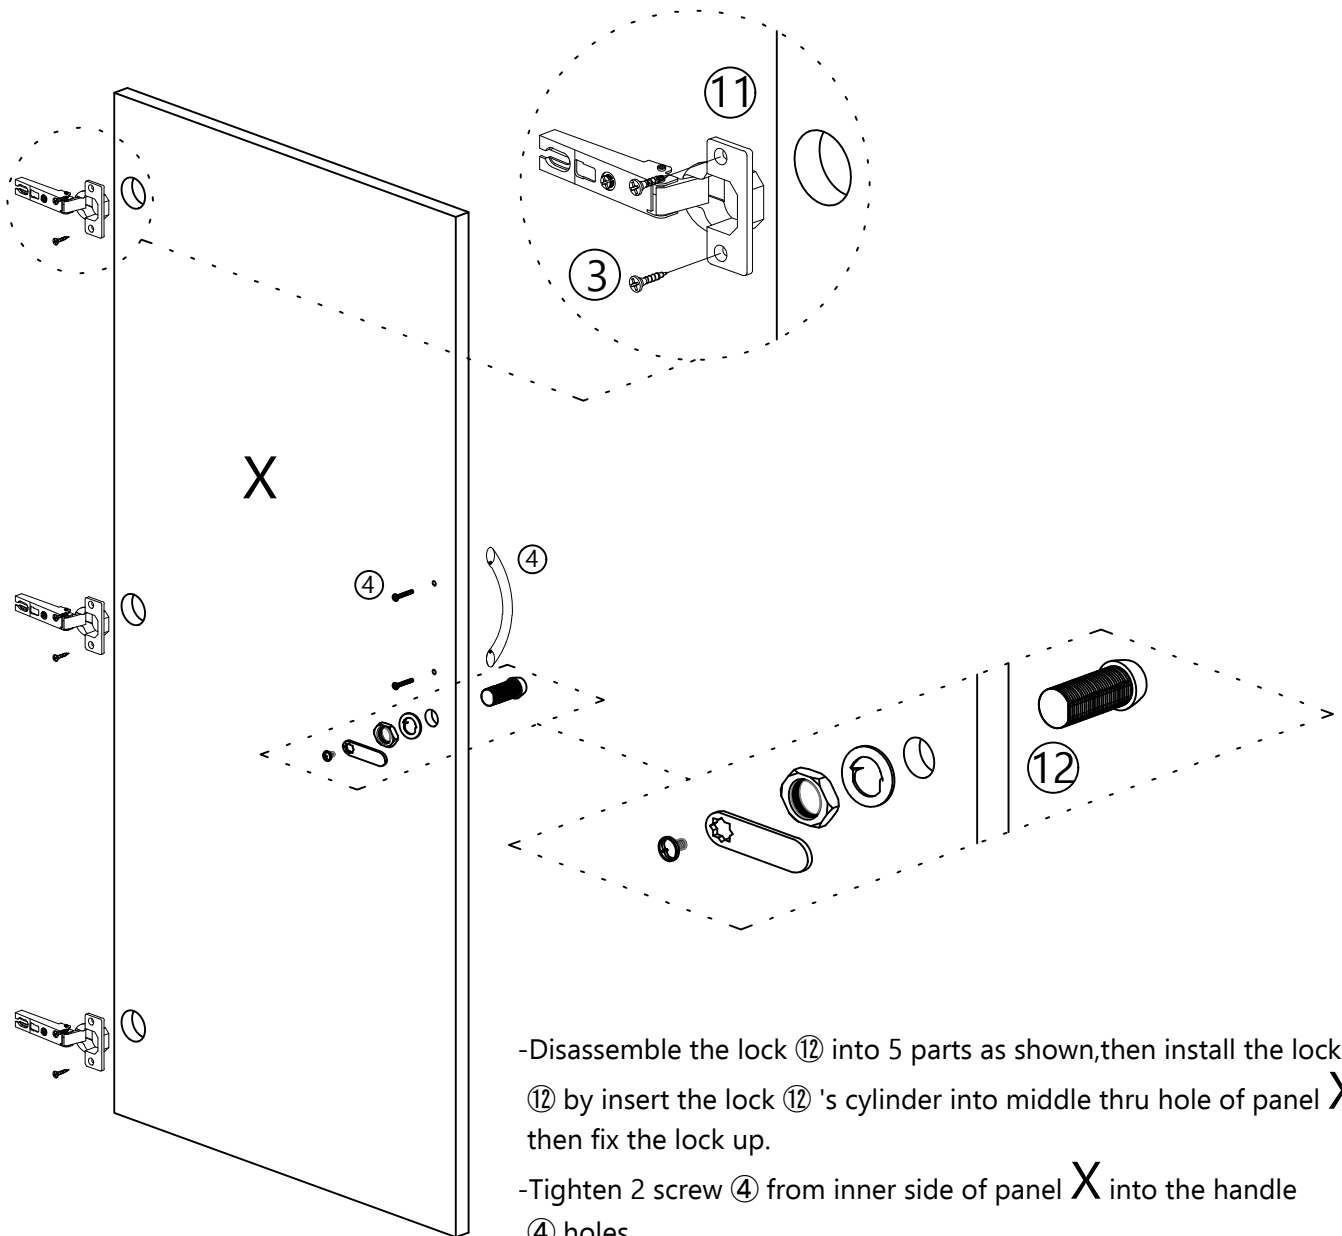

-Disassemble the lock ⑫ into 5 parts as shown, then install the lock ⑫ by insert the lock ⑫'s cylinder into middle thru hole of panel X, then fix the lock up.



-Tighten 2 screw ④ from inner side of panel X into the handle ④ holes.

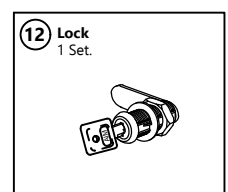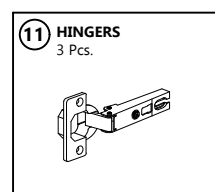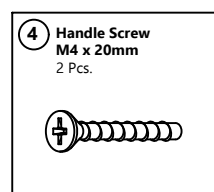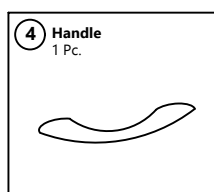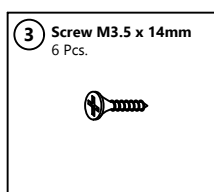

Step 8


* You can align the door panel X by tightening and loosening the screw as shown.

* Place hanging rod onto both panels I and K's V-bracket.

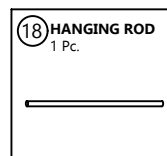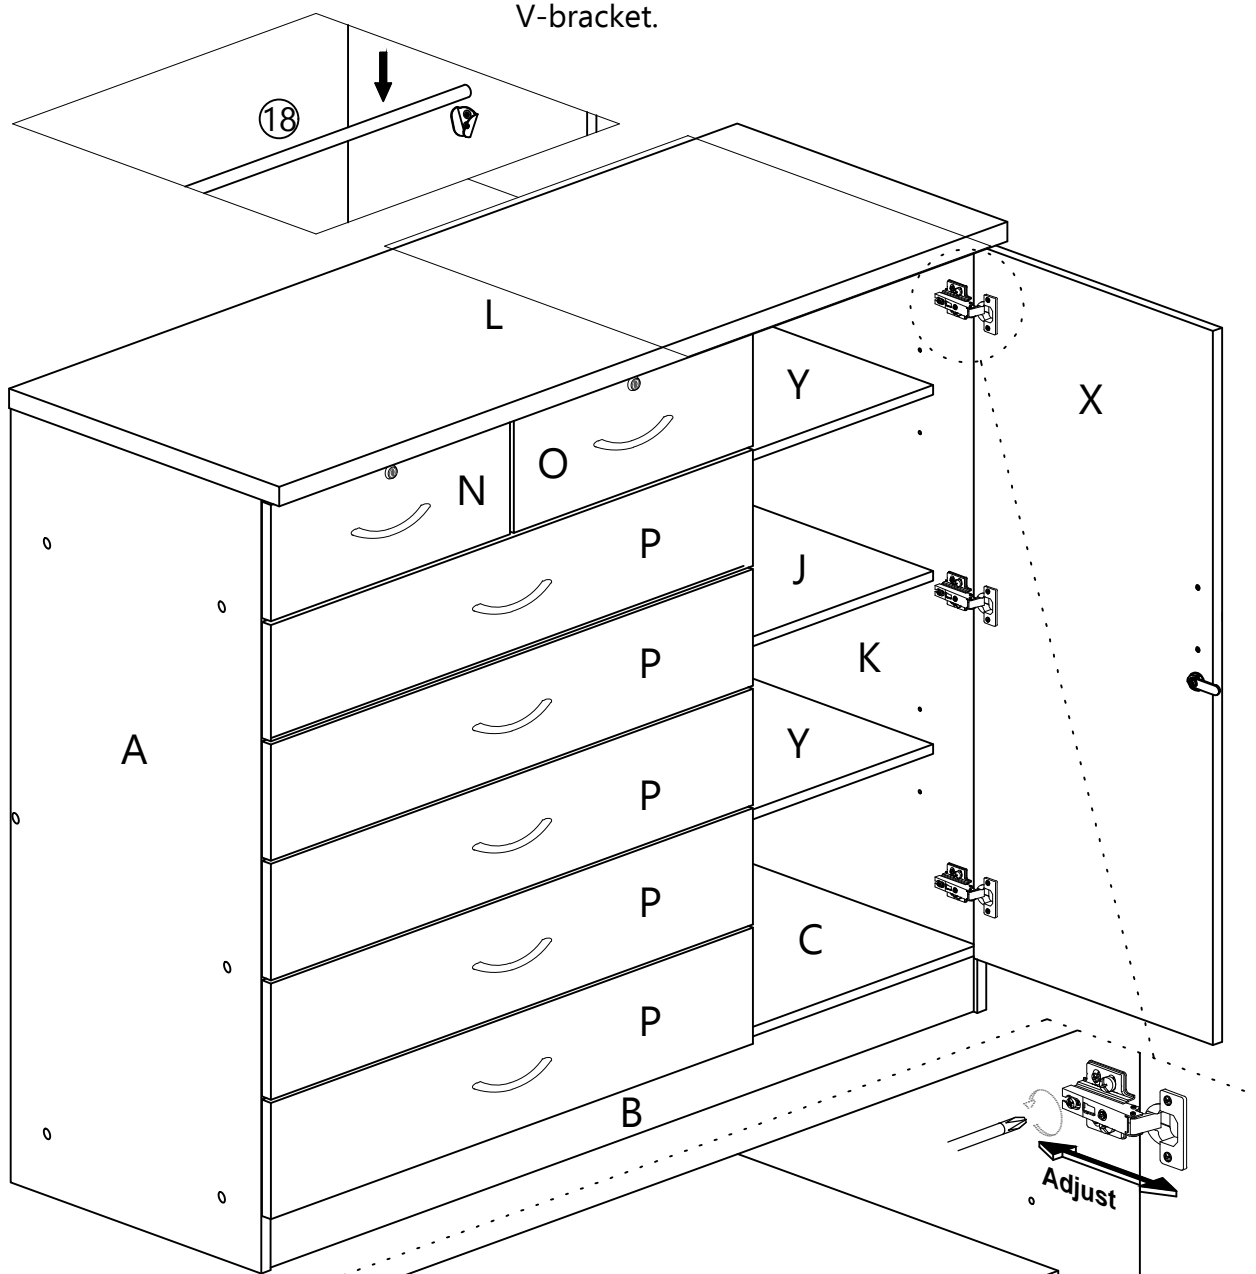


FITTING OF ANTI-TIP SAFETY STRAP


STEP 1:

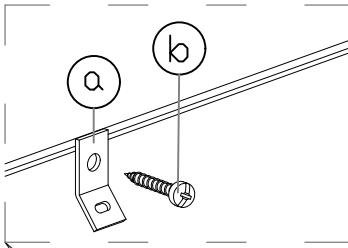

- Attach the mounting bracket (a) to the furniture in the solid part below the top panel a few inches away from the side of the unit.
- Screw (b) through the smallest hole of (a).

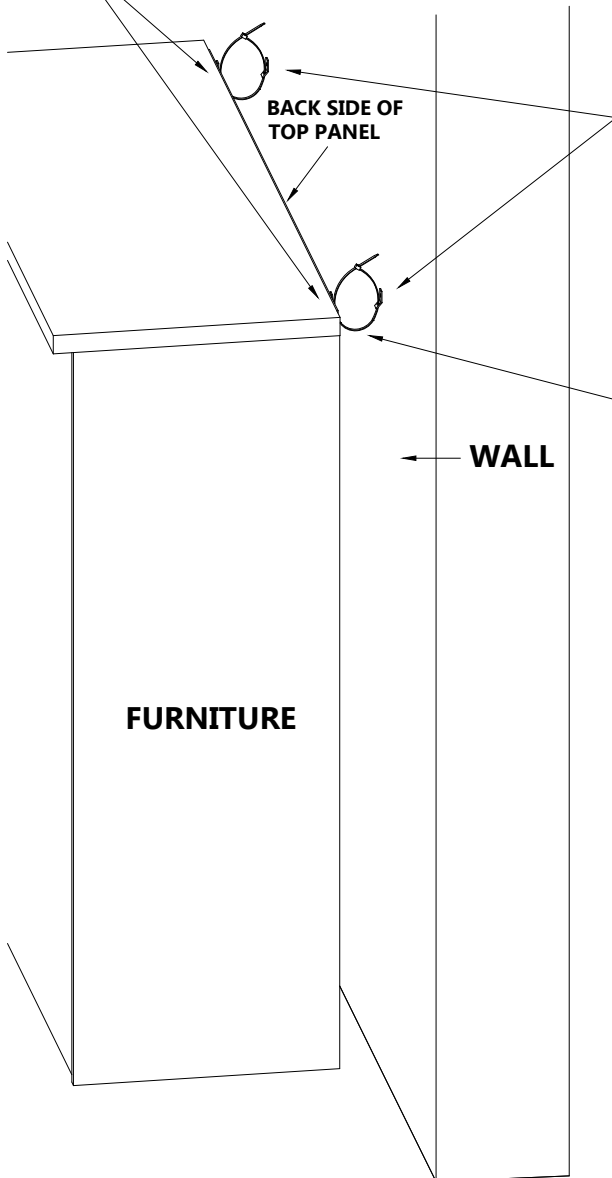





STEP 2:

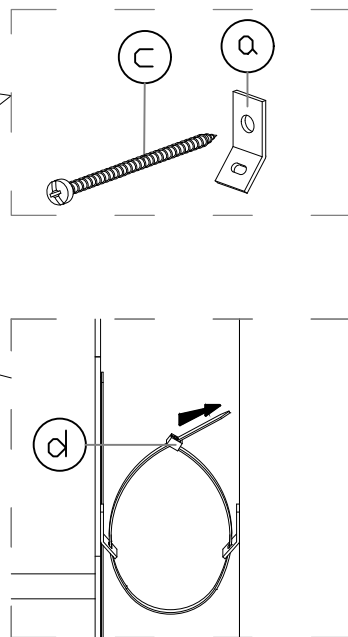

- Locate a stud in the wall behind the unit, does not have to be centered.
- Place the other mounting bracket (a) on the wall stud 2 inches below the mounting bracket secured to the back of your unit.
- Attach to the wall stud using (c) through the smaller hole of (a).


STEP 3:

- Repeat the same step a few inches away from the other side of the unit.
- Place the furniture into position so both mounting brackets are vertically in line.
- Lace the end of the restraint strap through the larger holes in each mounting bracket.
- Secure the straps and lock into place.

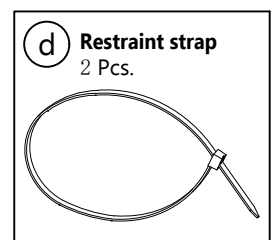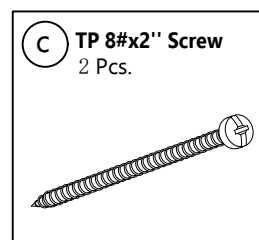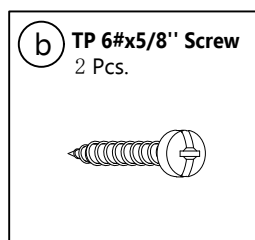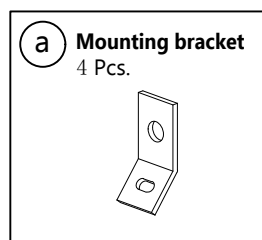

Completion

- * Take all drawers (5 big and 2 small), and slide them (the white rollers at drawer slide at both side of drawers are to go into the track of the slides at each side panel.) all the way gently, one drawer by one drawer starting from bottom one.

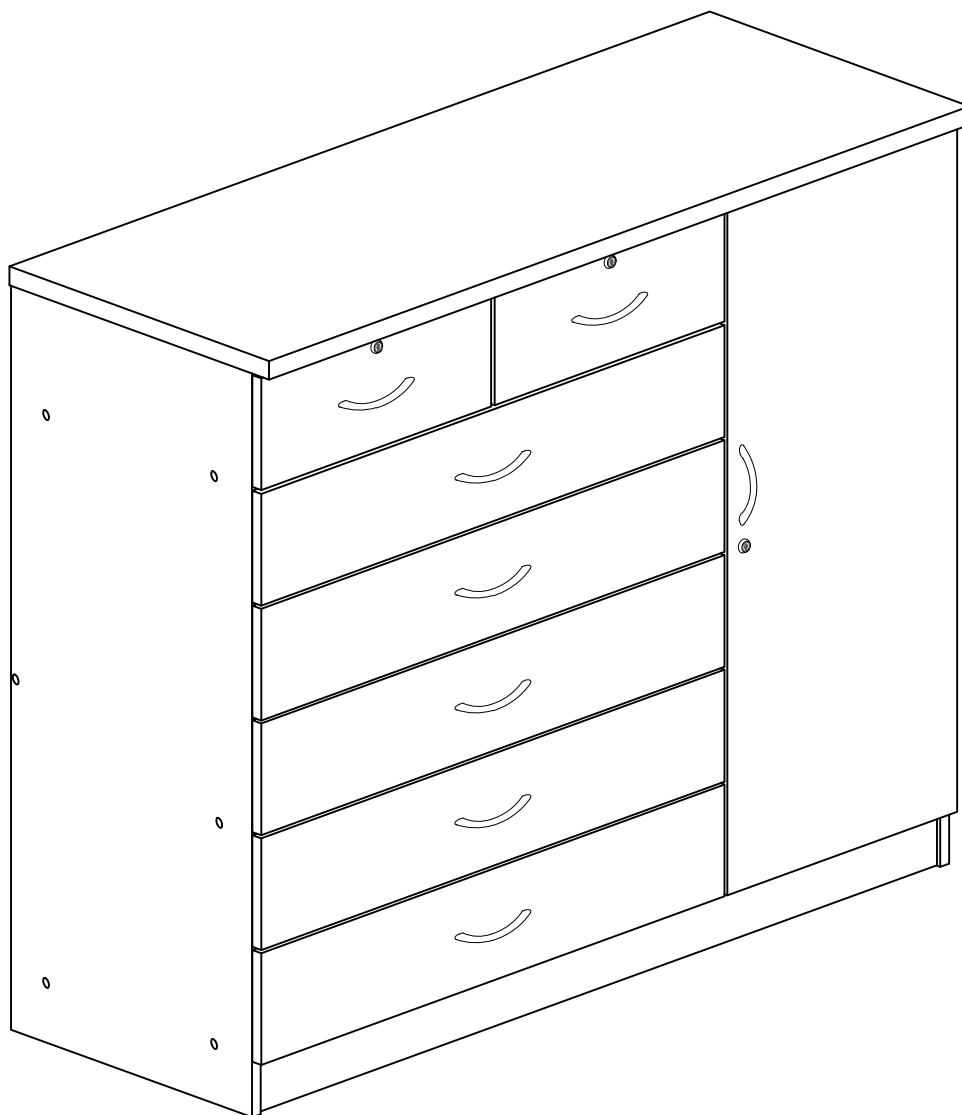

Enjoy & Thank you for purchasing from Hodedah!



In the interest of our environment please dispose of all packaging thoughtfully.